

## Autonics

### 2-Phase Closed-Loop Stepper Motor Driver

## AIS-D SERIES

### INSTRUCTION MANUAL



Thank you for choosing our Autonics product.  
Please read the following safety considerations before use.

#### ■ Safety Considerations

- ※Please observe all safety considerations for safe and proper product operation to avoid hazards.
- ※A symbol represents caution due to special circumstances in which hazards may occur.

- Warning** Failure to follow these instructions may result in serious injury or death.
- Caution** Failure to follow these instructions may result in personal injury or product damage.

#### ▲ Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.** (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) Failure to follow this instruction may result in fire, personal injury, or economic loss.
- Do not connect, repair, or inspect the unit while connected to a power source.** Failure to follow this instruction may result in fire.
- Install the unit after considering counter plan against power failure.** Failure to follow this instruction may result in personal injury, or economic loss.
- Check "Connections" before wiring.** Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.** Failure to follow this instruction may result in fire.
- Install the driver in the grounded housing or ground it directly.** Failure to follow this instruction may result in electronic shock, personal injury.
- Do not touch the unit during or after operation for a while.** Failure to follow this instruction may result in burn due to high temperature of the surface.
- Emergency stop directly when error occurs.** Failure to follow this instruction may result in fire, or personal injury.

#### ▲ Caution

- When connecting the power input, use AWG 18(0.75mm<sup>2</sup>) cable or over.**
- Install over-current prevention device (e.g. the current breaker, etc) to connect the driver with power.** Failure to follow this instruction may result in fire.
- Check the control input signal before supplying power to the driver.** Failure to follow this instruction may result in personal injury or product damage by unexpected signal.
- Install a safety device to maintain the vertical position after turn off the power of this driver.** Failure to follow this instruction may result in personal injury or product damage by releasing holding torque of the motor.
- Use the unit within the rated specifications.** Failure to follow this instruction may result in fire or product damage.
- Use dry cloth to clean the unit, and do not use water or organic solvent.** Failure to follow this instruction may result in fire.
- Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.** Failure to follow this instruction may result in fire or explosion.
- The driver may overheat depending on the environment.** Install the unit in the well ventilated place and forced cooling with a cooling fan. Failure to follow this instruction may result in product damage and degradation.
- Keep metal chip, dust, and wire residue from flowing into the unit.** Failure to follow this instruction may result in fire or product damage.
- Use the designated motor only.** Failure to follow this instruction may result in fire or product damage.

#### ■ Ordering Information

Ai	S	D	42	L	A
Encoder resolution					A
Motor length					10,000PPR (2,500PPR×4-multiply)
Motor frame size					S 67.5mm
					M 73.5mm
					L 81.5mm
Motor frame size					S 77.3mm
					M 90.3mm
					L 111.3mm
Motor frame size					S 81.9mm
					M 102.8mm
					L 119.8mm
Item					D Driver
Category					S Standard
Series					Ai Artificial Intelligence

Set	Driver	Motor
AIS-42SA	AIS-D-42SA	AI-M-42SA
AIS-42MA	AIS-D-42MA	AI-M-42MA
AIS-42LA	AIS-D-42LA	AI-M-42LA
AIS-56SA	AIS-D-56SA	AI-M-56SA
AIS-56MA	AIS-D-56MA	AI-M-56MA
AIS-56LA	AIS-D-56LA	AI-M-56LA
AIS-60SA	AIS-D-60SA	AI-M-60SA
AIS-60MA	AIS-D-60MA	AI-M-60MA
AIS-60LA	AIS-D-60LA	AI-M-60LA

※The above specifications are subject to change and some models may be discontinued without notice.  
※Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

#### ■ Specifications

Model	AIS-D-42SA	AIS-D-42MA	AIS-D-42LA	AIS-D-56SA	AIS-D-56MA	AIS-D-56LA	AIS-D-60SA	AIS-D-60MA	AIS-D-60LA
Power supply	24VDC=								
Allowable voltage range	90 to 110% of the rated voltage								
Power consumption	STOP <sup>※1</sup>	Max. 7W	Max. 7.5W	Max. 8W	Max. 9.5W	Max. 10W	Max. 11W	Max. 12W	Max. 13W
Max. RUN current <sup>※2</sup>	Max. 60W	Max. 120W			Max. 240W				
Max. RUN current <sup>※3</sup>	1.7A/Phase			3.5A/Phase					
STOP current	25% or 50% of max. RUN current (factory default: 50%)								
Rotation speed	0 to 3000rpm								
Resolution	500 (factory default), 1000, 1600, 2000, 3200, 3600, 5000, 6400, 7200, 10000PPR								
Speed filter	0 (disable), 2, 4, 6, 8, 10, 20, 40, 60 (factory default), 80, 100, 120, 140, 160, 180, 200ms								
Position control gain	(P Gain, I Gain)=(1, 1), (2, 1), (3, 1), (4, 1), (5, 1), (6, 1), (1, 2), (2, 2), (3, 2), (4, 2), (5, 2), (1, 3), (2, 3), (3, 3), (4, 3), (5, 3)								
In-Position	Within the range of Fast response: 0 to 7 or Accurate response: 0 to 7								
Pulse input method	1-pulse or 2-pulse input (factory default) method								
Motor rotation direction	CW (factory default), CCW								
Status indicator	• Power/Warning indicator: green LED      • Alarm indicator: red LED • In-Position indicator: yellow LED      • Servo On/Off indicator: orange LED								
Input signal	RUN pulse, Servo On/Off, alarm reset (photocoupler input)								
Output signal	In-Position, alarm out (photocoupler output), Encoder signal (A, A, B, B, Z, Z phase, corresponding to 26C31) (line driver output)								
Pulse width	CW, CCW: input pulse frequency duty 50%, Servo On/Off: min. 1ms, alarm reset: min. 20ms								
Rising/Falling time	CW, CCW: max. 0.5μs								
Pulse input voltage	CW, CCW - [H]: 4-8VDC=, [L]: 0-0.5VDC Servo On/Off, alarm reset - [H]: 24VDC=, [L]: 0-0.5VDC								
Max. input pulse freq. <sup>※4</sup>	CW, CCW: 500kHz								
Input resistance	220Ω (CW, CCW), 10kΩ (Servo On/Off, alarm reset)								
Insulation voltage	Over 100MΩ (at 500VDC megger)								
Dielectric strength	1,000VAC 60Hz for 1 min								
Vibration	1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours								
Shock	300m/s <sup>2</sup> (approx. 30G) in each X, Y, Z direction for 3 times								
Environment	35 to 85%RH, storage: -10 to 60°C								
Ambient temp.	35 to 85%RH, storage: 10 to 90%RH								
Approval	CE								
Protection structure	IP20 (IEC standard)								
Weight <sup>※5</sup>	Approx. 400g (approx. 290g)								

※1: Based on the ambient temperature 25°C, ambient humidity 55%RH, and STOP current 50%.

※2: Max. power consumption during operation. When changing the load rapidly, instantaneous peak current may increase. The capacity of power supply should be over 1.5 to 2 times of max. power consumption.


※3: RUN current varies depending on the input RUN frequency and max. RUN current at the moment varies also.

※4: Max. input pulse frequency is max. frequency to be input and does not same as max. pull-out frequency or max. slewing frequency.


※5: The weight includes packaging. The weight in parenthesis is for unit only.

※Environment resistance is rated at no freezing or condensation.

#### ■ Dimensions

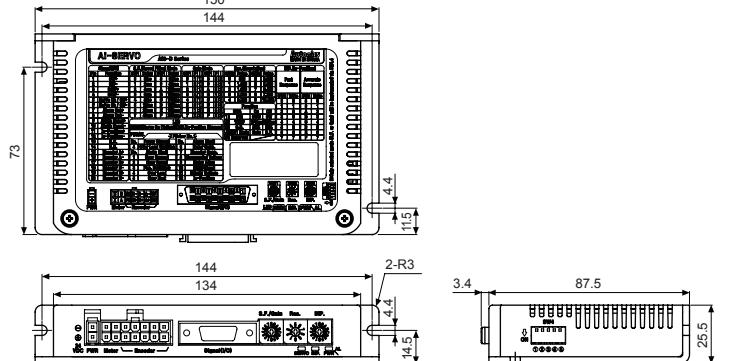

#### ■ Driver Unit Descriptions

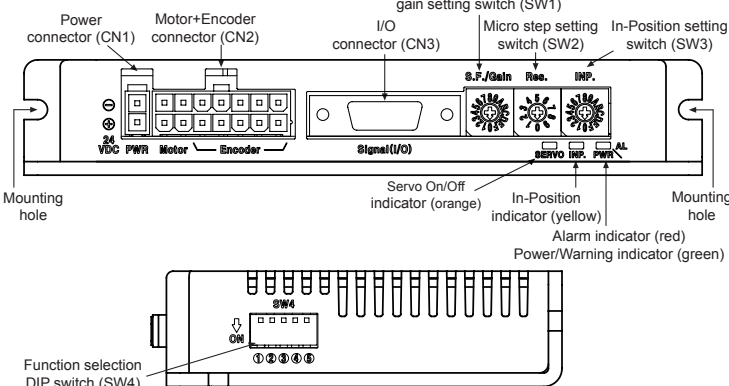

#### ■ Driver Status Indicators

Status indicator	LED color	Function	Descriptions
PWR	Green	Power indicator Warning indicator	Turns ON when the unit operates normally after supplying power Flashes when over load status is maintained
AL	Red	Alarm indicator	When alarm occurs, it flashes in various ways depending on the situation. Refer to "Control Input/Output" > "Alarm/Warning".
INP	Yellow	In-Position indicator	Turns ON when motor is placed at command position after positioning input.
SERVO	Orange	Servo On/Off indicator	Turns ON when Servo is operating, turns OFF when servo is not operating.

#### ■ Connection Connectors of Driver

○ Connector function			
● CN1: Power connector			
Pin arrangement	Pin No.	Function	Pin No.
2 1	2	GND	1
	1	24VDC	
● CN2: Motor+Encoder connector			
Pin arrangement	Pin No.	Function	Pin No.
14 13 ..... 9 8	1	GND	8
	2	Encoder A	9
	3	Encoder B	10
	4	Encoder Z	11
	5	F.G.	12
	6	Motor A	13
	7	Motor A	14
● CN3: I/O connector			
Pin arrangement	Pin No.	Input/Output	Function
10 ..... 1	11	Input	CW+
	2	Input	CW-
	3	Input	CCW+
	4	Input	CCW-
	5	Input	Servo On/Off+
	6	Input	Servo On/Off-
	7	Output	Alarm Out+
	8	Output	Alarm Out-
	9	Input	Alarm Reset+
	10	Input	Alarm Reset-

#### ■ Driver Setting

○ **SW1: Speed filter setting switch or position control gain setting switch**  
-SW1 shifts its mode between the speed filter setting or position control gain setting, depending on 4th pin in SW4 as follows.  
-Modified setting values are not applied in the running status, and the values will be applied after motor stopped.

4th pin in SW4      Setting  
OFF      Speed filter  
ON      Position control gain

● **Speed filter setting**  
-Speed filter decides operation responsiveness of the motor to input pulse.  
-Set the delay time between the position of input pulse and the position of motor to prevent load changing or disturbance with soft operation function.  
※If the setting value is too high, the synchronous response by command is decreased.

Setting switch      Setting      Delay time      Setting      Delay time      Position

0	Disable	8 <sup>※1</sup>	60ms	
1	2ms	9	80ms	
2	4ms	A	100ms	
3	6ms	B	120ms	
4	8ms	C	140ms	
5	10ms	D	160ms	
6	20ms	E	180ms	
7	40ms	F	200ms	

※1: Factory default

● **Position control gain setting**  
-Position control gain decides responsiveness of motor to position command.  
-Gain setting in motor stationary state, depending on load of motor, realizes rapid positioning and stabilized performance.  
-P Gain: Adjust vibration in running driver.  
-I Gain: Adjust vibration in accelerating/decelerating zone.

Setting switch      Setting      Gain      Setting      Gain

0	1	1	8 <sup>※1</sup>	3	2
1	2	1	9	4	2
2	3	1	A	5	2
3	4	1	B	1	3
4	5	1	C	2	3
5	6	1	D	3	3
6	1	2	E	4	3
7	2	2	F	5	3

※1: Factory default

○ **SW2: Resolution setting switch**  
-Set the resolution of driver.  
-The number of pulses per 1 rotation by resolution is each 500, 1000, 1600, 2000, 3200, 3600, 5000, 6400, 7200, 10000.  
-Modified setting values are not applied in the running status, and the values will be applied after motor stopped.

Setting switch      Setting      Pulse/Revolution      Resolution

0 (factory default)	500	2.5
1	1000	5
2	1600	8
3	2000	10
4	3200	16
5	3600	18
6	5000	25
7	6400	32
8	7200	36
9	10000	50

○ **SW3: In-Position setting switch**  
-After position command pulse has finished, if the gap between target position and real position is under In-Position setting value, positioning completion pulse is output.  
-Modified setting values are not applied in the running status, and the values will be applied after motor stopped.

Setting switch      Fast Response      Accurate Response      Position

0 <sup>※1</sup>	0	8	0
1	±1	9	±1
2	±2	A	±2
3	±3	B	±3
4	±4	C	±4
5	±5	D	±5
6	±6	E	±6
7	±7	F	±7

※1: Factory default

○ **SW4: Function selection DIP switch**  
-Set rotation direction, pulse input method, STOP current, SW1 setting, and test mode.

Setting switch      No.      Name      Function      Switch position

ON	1	DIR	Rotation direction	ON	OFF (factory default)
	2	1P/2P	Pulse input method	CCW	CW
	3	C.D.	STOP current	25% of max. RUN current	50% of max. RUN current
	4	SW1 Mode	SW1 setting	Position control gain	Speed filter
	5	Reserved	Test mode	Test mode	Normal mode


※1: When motor runs or stops, modified setting values will be applied immediately.  
※2: Modified setting values are not applied in the running status, and the values will be applied after motor stopped.  
※3: Set to OFF when using the device. It is only for the operation test in manufacturing process.

● **Pulse input method**  
※1-pulse input method  
-CW: Rotation operation signal input  
-CCW: Rotation direction signal input  
([H]: Forward rotation, [L]: Reverse rotation)

※2-pulse input method  
-CW: Forward rotation signal input  
-CCW: Reverse rotation signal input

Rotation angle position      CW      CCW      CW      CCW      CW      CCW      CW      CCW


※[H]: Photocoupler ON (voltage of both ends 4-8VDC), [L]: Photocoupler OFF (voltage of both ends 0-0.5VDC)  
● STOP current  
-In order to decrease motor heat and current consumption at motor stopping moment (in case there is no input during the time of the double width of last input pulse), set the stop current supplied to the motor phase.

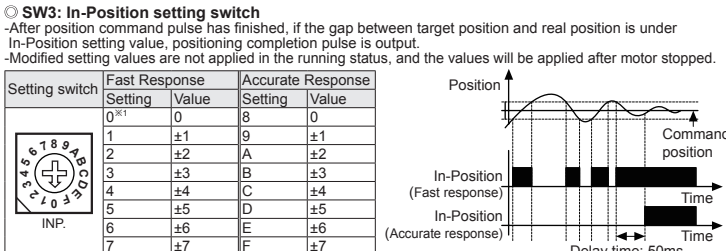

○ **SW4: Function selection DIP switch**  
-Set rotation direction, pulse input method, STOP current, SW1 setting, and test mode.

Setting switch      No.      Name      Function      Switch position

ON	1	DIR	Rotation direction	ON	OFF (factory default)
	2	1P/2P	Pulse input method	CCW	CW
	3	C.D.	STOP current	25% of max. RUN current	50% of max. RUN current
	4	SW1 Mode	SW1 setting	Position control gain	Speed filter
	5	Reserved	Test mode	Test mode	Normal mode

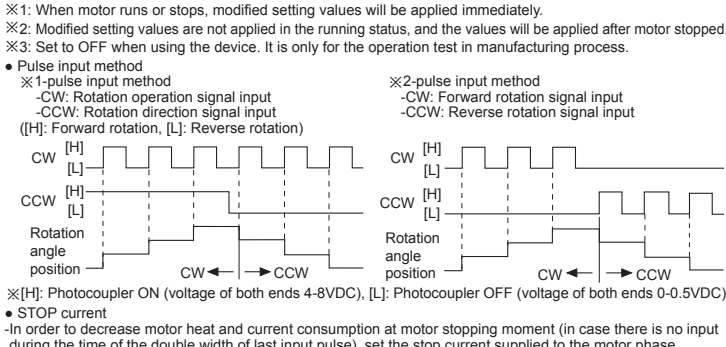

#### ○ Connector specifications

Type	Model	Specifications	Connector	Connector terminal	Housing	Manufacture
Driver	CJ-PW- <sup>※1</sup>	0039301020	—	—	—	Molex
Power	CHD1140-02	CTD1140	—	—	—	HANLIM
Driver	35318-1420	—	—	—	—	Molex
Motor+Encoder	5557-14R	5556T	—	—	—	Molex
Driver	10220-52A2 PL	—	—	—	—	3M
I/O connector	10120-3000PE	—	—	—	—	3M
	CJ-MP20-HP- <sup>※2</sup>	(sold separately)	—	—	—	Autonics

※Above connectors are suitable for AIS-D Series. You can use equivalent or substitute connectors.

○ **Cable (sold separately)**

Type      Model

Power cable      CJ-PW-<sup>※1</sup>

CJ-MP20-HP-<sup>※2</sup>

(sold separately, standard: AIS TAG)

I/O cable